

Cam Lock Swing N' Slide SLIDER Operate, Clean and Ventilation Instructions

Bristol Cam Lock Swing N' Slide Sliders utilize sliding from left and right for ventilation and sash removal to inside for super easy inside cleaning.

VENTILATION

- 1) Unlock cam locks by putting lever in the upper most position, ① and ②.
- 2) Slide left or right sash, ③ and ④ in toward opposite jamb side to desired location for preferred air flow. (Note: when closing be sure to pull levers down to re lock sash in place.



- 3) For a secure ventilation, unlock cam locks, pull vent latch out, ⑤ on outer most sash and slide inner sash until it stops at the steel spring ventilation lock, ⑥.



CLEANING

Clean vinyl and hardware with a mild, non ammonia, detergent or a mild abrasive for heavily soiled marks. Always use a mild window cleaner on the glass.

- 1) Repeat steps ① and ② for ventilation. Slide both sash in approximately 3-4", enough to clear jambs, toward center of window, using sash handles, see ③ and ④.
- 3) Disengage swing n' slide release handles on the inner most sash: Push thumb release on bottom lock up to disengage locking handle, ⑦ and push handle down into sill, ⑧, to a horizontal position. Repeat same actions on the top of the sash pushing the



locking handle into the track in the top of window.



Be sure both release

handles are pushed all the way into the top and bottom tracks.

Cam Lock Swing N' Slide SLIDER Operate, Clean and Ventilation Instructions


- 4) Grasp inner sash rail and pull sash in toward yourself. Repeat step 3 (disengaging release handle) for outer most sash and pull sash inward. Sash are now completely open for easy cleaning of both sides.



- 5) When sash are both open for cleaning inspect the swing n' slide lower tracks and wipe clean to remove any debris. Use a vacuum or blow dryer to clean.

SCREEN CLEANING:

- 5) Use a soft brush and a mild detergent to clean. If you wish to take the screen out, grasp lift rail and apply pressure to release from the screen track and tilt to bring screen to the inside, 9. Note: Due to the

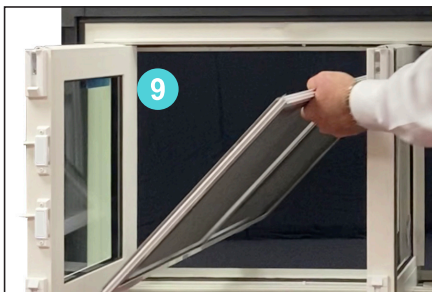

screen being a full screen there may be a slight difficulty pulling to the inside.

TO CLOSE SASH:

- 8) Close outer-most sash first by grasping and pushing sash back into frame. Once in place slide sash into the side jamb of the slider. Pull release handles back up, 10, and reengage into locking positions on the top and bottom of the sash, 11.
- 9) Repeat step 8 to close the inner most sash and reengage release handles.



- 10) Complete closing by putting cam lock handles 12 and 13 in the lower locking position.



SLIDER ROUTINE MAINTENANCE

IMPORTANT NOTE: Periodically clean out both sill tracks for any debris buildup. Inspect weep holes on outside of window to see they are not clogged. If this maintenance is not done, water leakage may occur. In addition, failure to perform this maintenance could void your warranty.