

Sweep [Cam] Locks Double Hung Operate, Cleaning and Ventilation Instructions



Cleaning and Operating Positions

Unlock double security locks, 1 & 2, and raise bottom sash about six inches, 3. Only use handles to raise and lower sash, 4 & 5. Release tilt latches, 6 & 7 with fingertips and pull top of sash inward. Swing sash down until it rests in the cleaning position.

Return to normal operating position by

simply swinging sash up and pushing until it locks into position. Keep fingers clear at all times.

To clean top sash, first swing out bottom sash then lower top sash about six inches, (3), and use same procedure as on bottom sash.



The vinyl of your Bristol window will require routine cleaning. Use a mild detergent for light soil. For heavily soiled areas a cleaner with mild abrasive is suggested. (Do Not Use On The Glass.)

Sash Removal

DO NOT REMOVE SASH FOR CLEANING. REMOVAL IS ONLY REQUIRED FR GLASS REPLACEMENT OR EMERGENCY ESCAPE.

Both top and bottom sashes are removed using the same procedure. Place sash in the cleaning position, ③. Remove tamper-proof locks, ④, on either side by pulling inward with finger. Grasp side rails, swing sash up to 45° angle, tilt sash sideways and lift



clear. (Sash will only come out at the 45° angle.)

Replace by reversing removal procedure.

ALL CLEANING AND REMOVAL OPERATIONS SHOULD BE PERFORMED ONLY WHILE HOLDING INSERT TOWARD THE CENTER OF THE SASH.

Double Hung Routine Maintenance

Important Note: Periodically clean any debris buildup on sill. Inspect the outside of the window for any maintenance needed. If the above maintenance is not performed, water leakage may occur. In addition, failure to perform this maintenance could void your warranty.