

SLIDER SLIDE AND REMOVE CARE AND OPERATION



To Open Sash:

- A) Unlock double security locks, (① and ②), and slide sash towards other side of window, using sash rail.

To Remove Sash:

- B) Slide sash open to allow disengaging of slider latches on left and right side of inner most sash, ③ and ④, by putting downward pressure on the release latches.
- C) With both latches released, grasp sides of sash and pull forward tilting top of sash in toward you with upward motion.
- Lift bottom of sash from track in sill, ⑤. This allows for easy cleaning of inside and outside glass surfaces.
- D) Repeat steps 1, 2, and 3 for outer most sash releasing latches and removing sash.

To Clean:

- E) The vinyl of your Oxford Windows requires minimal routine cleaning. Use a mild detergent for light soil. Heavily soiled areas may require a cleaner with a mild abrasive.
(Do not use abrasive cleaners or pads on glass.)

Clean Tracks:

- F) With tracks exposed ⑥, clean well with wet rag and non abrasive cleaner. Vacuum if necessary to remove any debris.

SLIDER SLIDE AND REMOVE CARE AND OPERATION

Screen Removal and Cleaning:

- G) Grasp bottom rail and lift up to remove from track. Tilt screen to bring inside ⑦. Use a soft brush and a mild detergent to clean. (Tab on 1/2 slider screen is used for sliding - do not use for removal of screen.) Replace by inserting into top header section of window and sliding into place.

Note: Be sure weatherstripping remains in place.



To Replace Sash:

- H) Replace outer most sash first by positioning sash over sliding track in sill and push top of sash into header until release latches lock into header of window. ⑧
- I) Repeat step H for inner most sash.



To Close Sash:

- J) Use handle rails to slide sashes into jamb.
- K) Latch locks on interlock by moving to downward positions ⑨, to securely lock sash in place.

